

RAVE



Snow Machine
AF-1221
User Manual

WELCOME

Thank you for using 600W small snow machine. Please read this user manual to ensure safe and reliable use, before using the product.

FEATURES

- Compact 600W Snow Machine
- Remote control distance ($\leq 50\text{m}$)

SPECIFICATIONS

Voltage:	240VAC @ 50-60Hz
Power:	600W
Fuse:	220~240V 6.3a
Size:	335 (L) x 175 (W) x 140 (H)mm
Weight:	3.2kg
Snow water capacity:	1L

ATTENTION

1. Do not use in a doorway or confined space.
2. Stop the machine if nobody is monitoring it. No child should be allowed to use the machine.
3. Please use only high quality snow liquid (oil)
4. Don't spray the liquid directly at people.
5. Power off before the snow liquid has been depleted in the tank of the unit.

OPERATION

1. Open the carton to check whether all necessary parts and accessories are included.
2. Open the cover of the liquid can, put the special snow water into the can.
3. Connect the power line to the power socket with earth line.
4. Plug the remote box into the three-core socket at the back of the snow machine.
5. Press the "unlock" button , the machine will begin to spray out snow flakes.
6. Press "lock" button, stop spraying snow flakes.
7. Do not remove the fabric from the nozzle of the unit.

MAINTENANCE

1. After about 40 hour's continual use, please use 2-4L pure water to clean the inner pipe.
2. Change the snow liquid after a long period of not using the machine.
3. If the snow is small or stops working, Power off at once; check the power line, the fuse. Take off the control line; check the connection of the line. Check the remains of the snow water. Check the inner part of the spray, check if it is clogged or damaged

BOX CONTENTS

- 1 x 600W Snow Machine
- 1 x Remote Control
- 1 x Remote Control Receiver

Distributed by:
TechBrands by Electus Distribution Pty. Ltd.
320 Victoria Rd, Rydalmere
NSW 2116 Australia

Ph: 1300 738 555
Int'l: +61 2 8832 3200
Fax: 1300 738 500

www.techbrands.com

Made in China